




INSTALLATION GUIDE


Concealed body of two concealed stop
cocks 200mm centre
Range:VIC

Requirements:-


- 1) **Pressure** :- 3 bar to 4 bar (Ideal Working Pressure)
- 2) **Pipe Lines** :- 2 lines for hot & cold inlet (15 mm/ 1/2" BSPP)
(Hot & Cold water pressure to be balanced for optimum results.)
- 3) **Installation** :- In wall Concealed

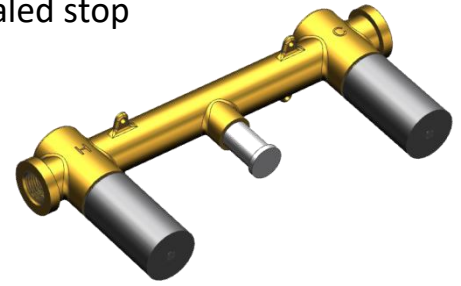

Make sufficient cavity space for
setting up concealed body.

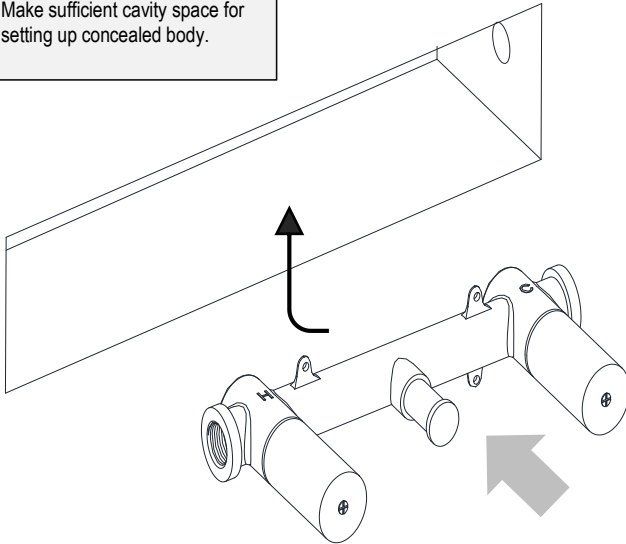


Add teflon tape
before tighten
water lines, &
make sure water
is off during
connection.

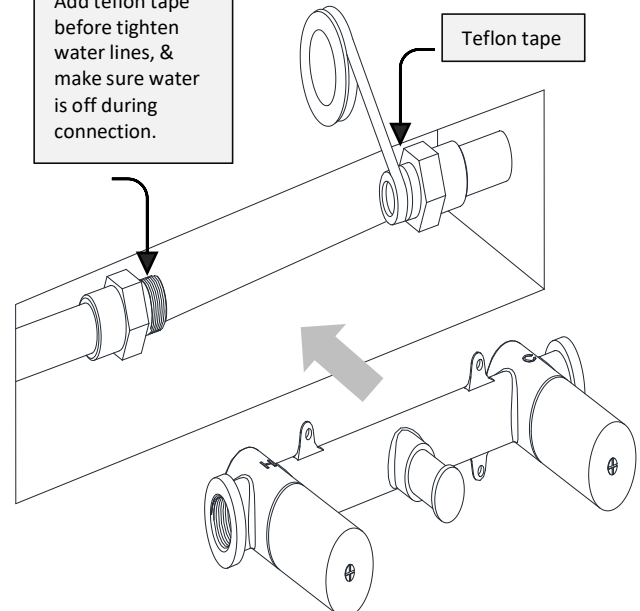


Set & insert concealed body into wall.

Securely connect both
hot & cold water lines

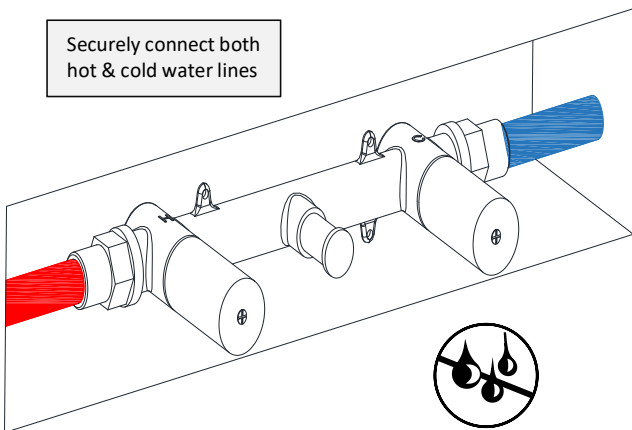

Make sure tile surface is finished B/W
min & Max Marking's given on cover.

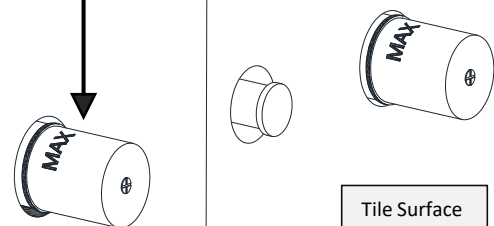

Safety Tips :-

- ❖ Make sure no loose fitting, Check for Leakage during water fittings.
- ❖ Keep water connection off during connection, avoid bending or twisted condition in pipes.
- ❖ Maintain desire water pressure to get conventional output.
- ❖ Don't use any metal/hard bristle scrub while cleaning .
- ❖ Don't push fittings forcefully, can lead to damage or crack.