











INSTALLATION GUIDE



3-Hole Basin Mixer without Pop-up Waste System

Requirements:-

- 1) **Pressure** :- 3 bar to 4 bar (Ideal Working Pressure)
- 2) **Pipe Lines** :- 2 lines for hot & cold inlet (15 mm/ 1/2" BSPP)
(Hot & Cold water pressure to be balanced for optimum results.)
- 3) **Installation** :- Deck mounted (Over Bath tub prefer)

Range:VIC

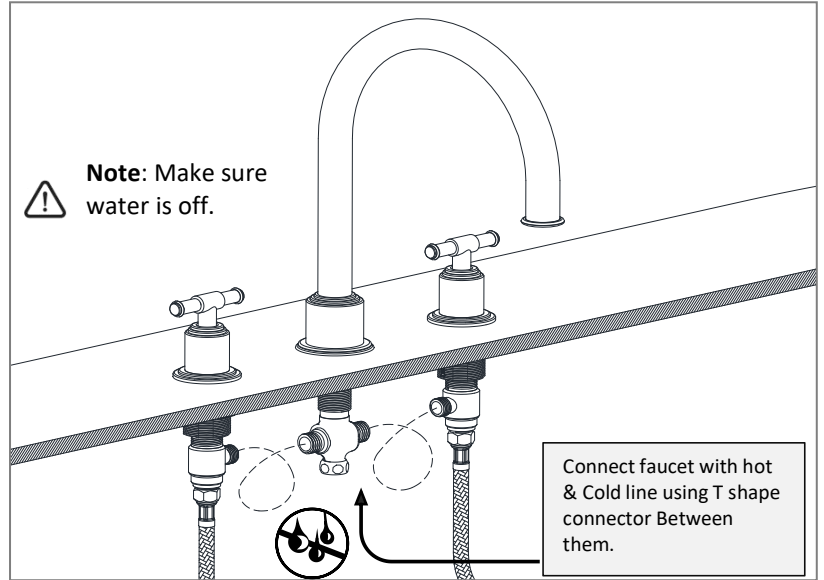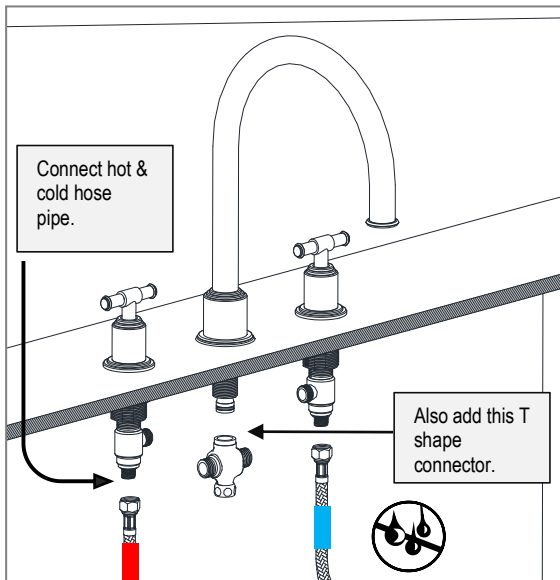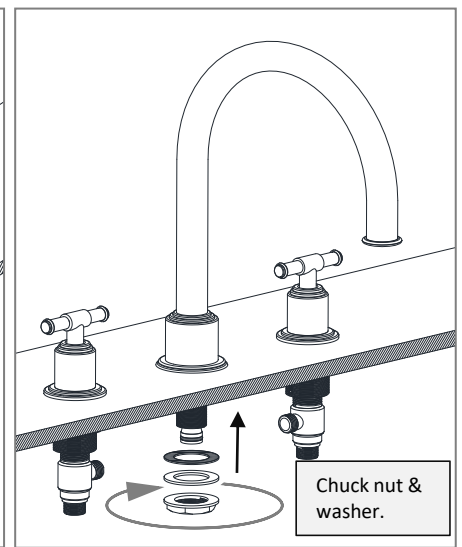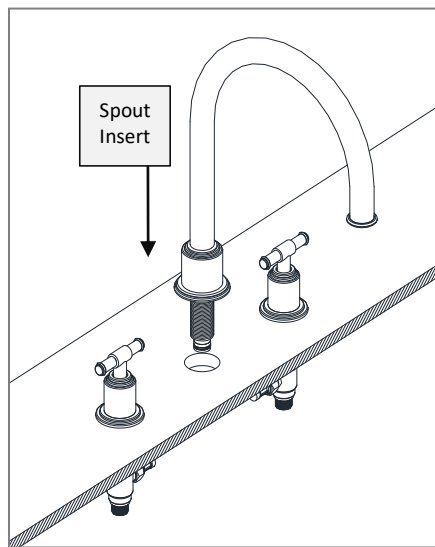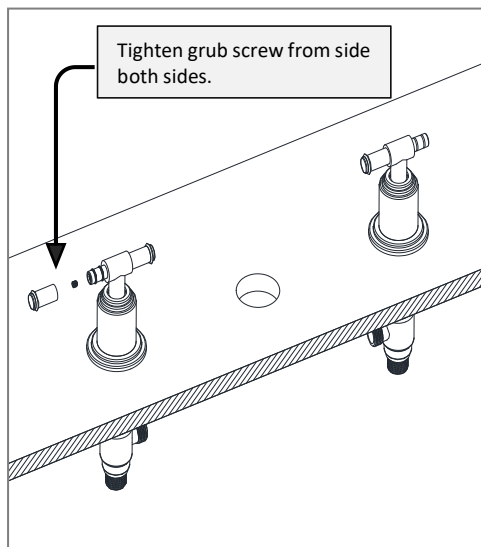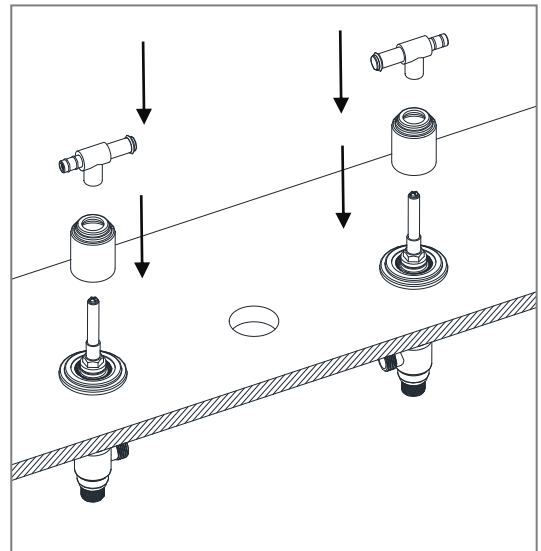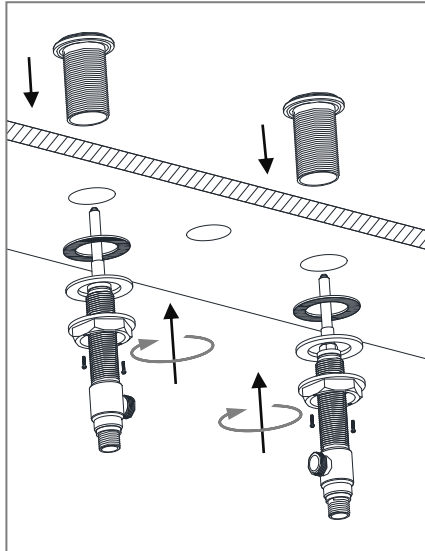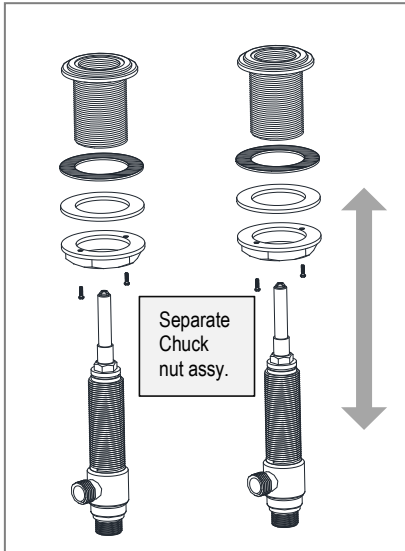

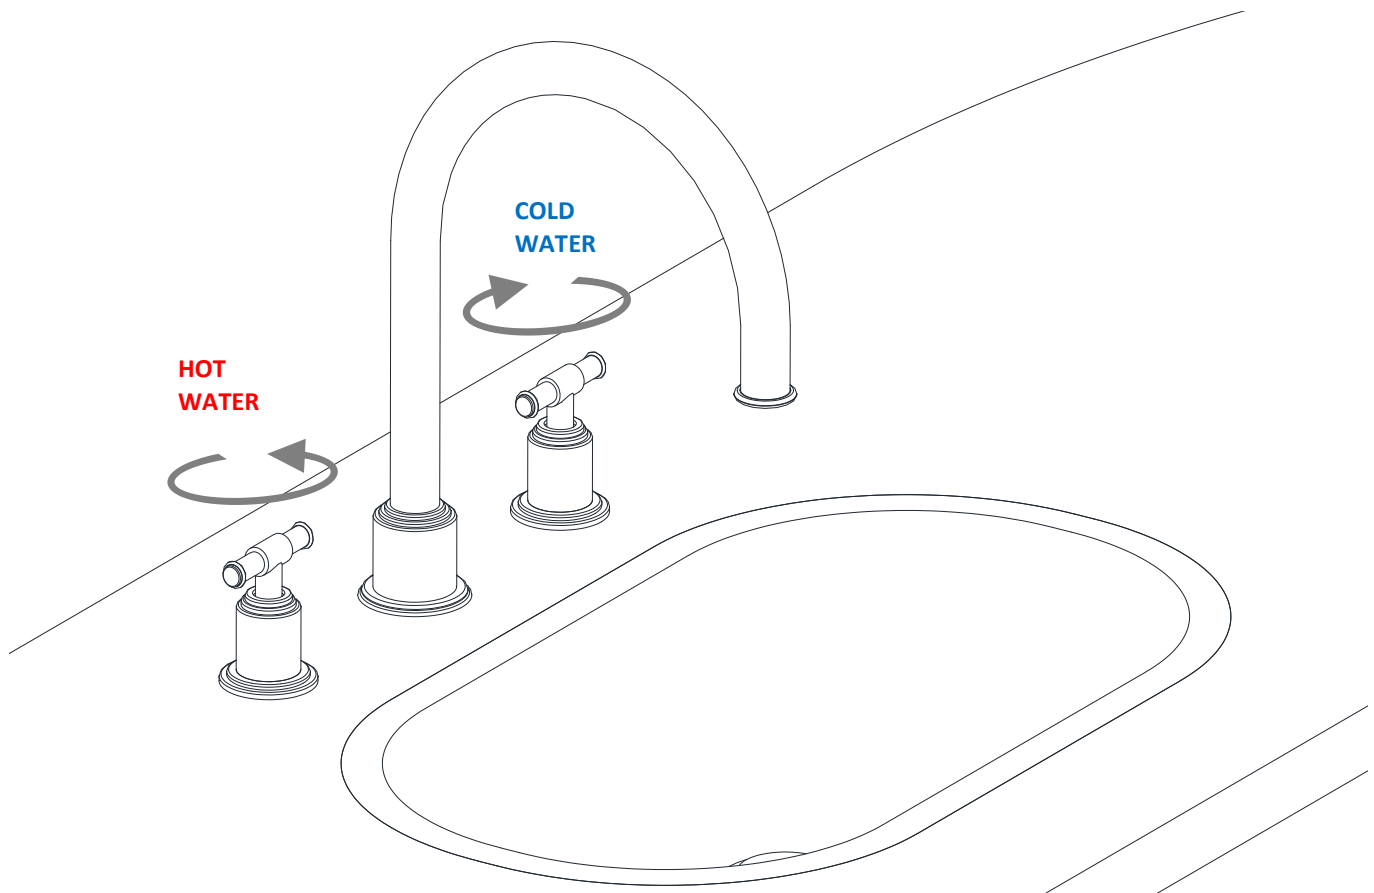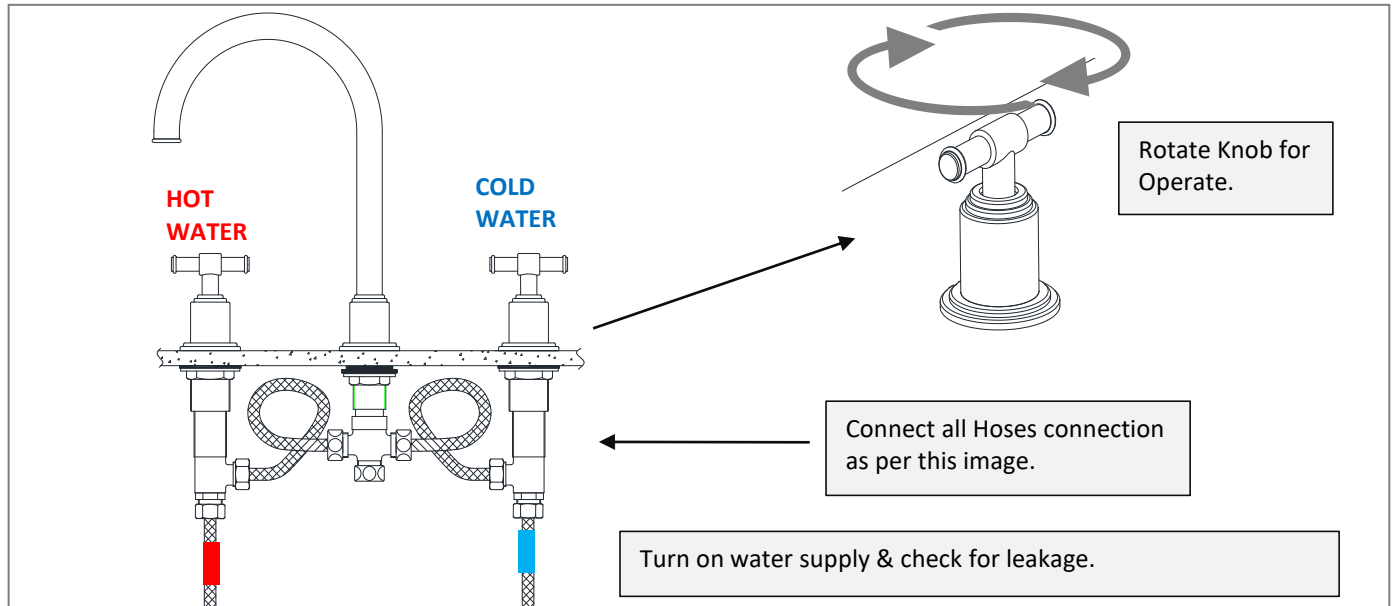

Safety Tips :-

- ❖ Make sure no loose fitting, Check for Leakage during water fittings.
- ❖ Keep water connection off during connection, avoid bending or twisted condition in pipes.
- ❖ Maintain desire water pressure to get conventional output.
- ❖ Don't use any metal/hard bristle scrub while cleaning .
- ❖ Don't push fittings forcefully, can lead to damage or crack.



Correct Cleaning Steps:

1. Apply Liquid Soap (pH ~7):

Use a mild liquid soap (pH 5-7) or Glitz solution with a neutral water.

Spray it gently on the Outer surface of Product.

2. Use a Soft Cotton Cloth:

Wipe the Product with a soft cotton cloth to remove dirt, stains, or water marks.

This prevents scratches and keeps the surface shiny.

3. Rinse with Water:

Spray clean water on the fitting after wiping with soap.

This helps remove any soap residue.

4. Final Wipe with Soft Cotton Cloth:

Again, wipe with a soft cotton cloth to dry the fitting.

This ensures no water spots are left.

✗ Don'ts (Avoid These):

Don't use Powder Soap:

It can be abrasive and scratch the fitting surface.

Don't use Scrubbing Pads:

Scrubbing with rough materials can damage the finish and reduce shine.

For Non
Chrome
Surface



For
Chrome
Surface



**Recommended Cleaning:-
Twice in a Week.**